



Subisu Cablenet (P.) Ltd.  
Baluwatar, Kathmandu, Nepal  
Tel: 01-4235888, 9801235888  
Email: [consumer.sales@subisu.net.np](mailto:consumer.sales@subisu.net.np)

For Technical Support  
Tel: 01-4235888, 9801235888  
Email: [support@subisu.net.np](mailto:support@subisu.net.np)

## HYBRID SET-TOP-BOX USER GUIDE



# WELCOME TO **clear tv**

## CLEAR TV HYBRID SET-TOP BOX (STB) IS FEATURE PACKED WITH:



1. The capacity to record and play multi-format contents on an external USB hard disk or flash memory
2. Home Screen (for one window overview of the entire service)
3. Electronic Program Guide (7 days detailed hour-by-hour program guide of each channel)
4. Favorite (to list favorite channel enabling to quick jump)
5. Catch-Up TV (catch up to your favorite program, if in case you miss them)
6. Video On Demand (watch movies, TV shows, documentaries, etc. of your choice)
7. Reminder & Recording (set up reminder or record program of your interest)

## Easy Installation Process

You will be receiving a Hybrid Set-top-Box, remote control, power adaptor and HDMI cable along with your subscription to Clear TV.

Now, please follow the instructions on setting up the Clear TV Set-top-Box on your television.

1. Connect your main television coaxial TV cable to the RF in of the Set-top-Box.
2. Connect the Set-top-Box to your television via using the HDMI or Audio/Visual Cable.
3. Switch on the Set-top-Box after connecting it by using the power adaptor.
4. Your Clear TV Set-top-Box is now successfully connected.

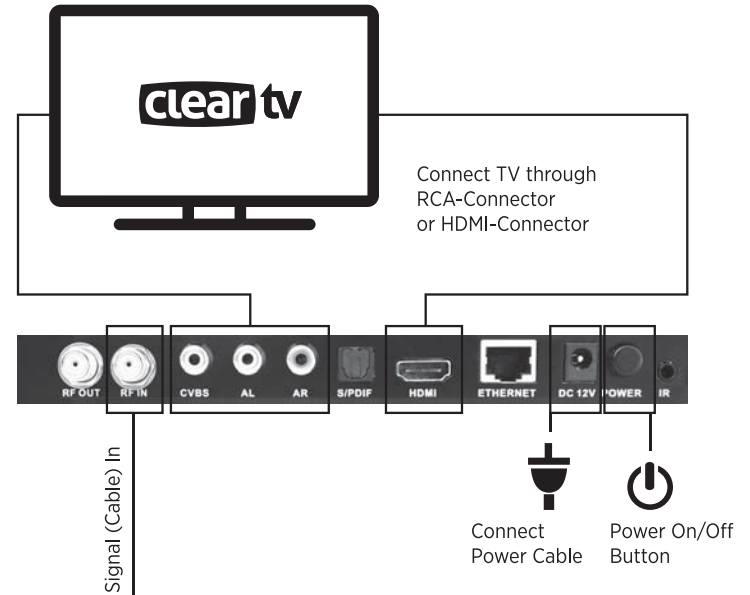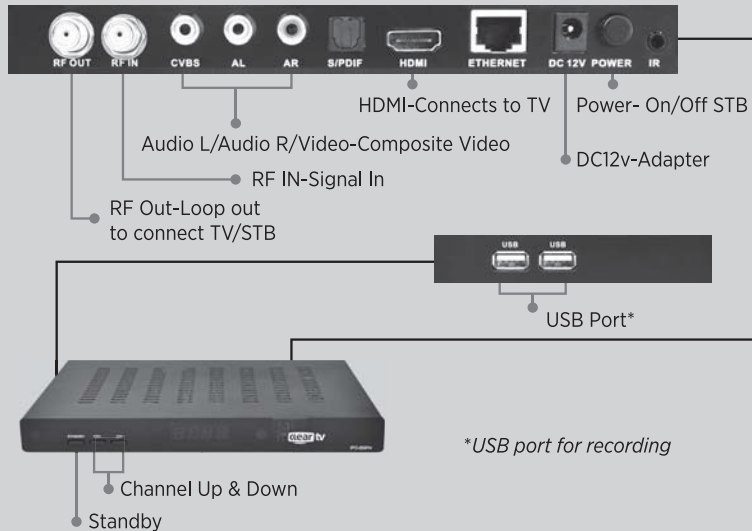

Now select the Input mode of the connection between your television and Clear TV STB (HDMI or A/V) by using the remote control of your television.

The logo of Android followed by Clear TV will be shown on your TV screen for a while.

After that, Clear TV's home screen will appear along with system initializing meter which has to complete 100%.

## To Search Channels

Press the menu key on STB's remote (Please read STB's user guide to find out more on remote control) and go to search icon by using navigation key on the remote. Select the search icon which will be progressed to a page showing different features. Press NIT Search button and press OK.

On the next page, details should be shown as:

Frequency: 306000  
 Symbol: 6875  
 Modulation: 64 QAM  
 Bandwidth: 8Mb

Press Search icon and the channel search should progress to 100% and should show a "Search Finished" notification. Press OK.

Now you can go directly to the channel list or go to home page and select the channel you want to watch.


**CLEAR TV SET- TOP BOX - REMOTE KEY DESCRIPTION:**




 **1. Power Button** - Turns On or Off the Set-Top Box


**2. Function Key** -

- Red Button - Pressing the red button shows the row of previous channel list (available inside Channel List/Guide).
- Green Button - Pressing the green button shows the row of ahead channel list (available inside Channel List/Guide).
- Yellow Button - Pressing the yellow button helps to mark and unmark your favorite channels which will be available in the favorite list (available inside Channel List/Guide).


 **3. Home Page** - For one window overview of the services.


 **4. Mute/Un-mute** - Provides access to Sound Control.


 **5. Reminder/Record** - Helps to Set Reminder or Record the Program. Also provides short description of a program (available in Guide).


 **6. Navigation Key** -


- To navigate features at a time
- To Scroll Up and Down/ Left and Right
- To scroll the channel up and down
- To maintain the Volume level

 **7. OK** - Selects highlighted items. Also displays the mini-guide while watching channels.


 **8. Menu** - Shows the list of available features.


 **9. Close** - Returns to the previous guide screen/returns to the previous channel you.


 **10. FAV** - Allows you to view your favorite channels that are on your favorite list.


 **11. Play/Pause** - Play and Pause the live program (Service Not available).

 **12. Record/Stop** - Records the video content /stops to record (Service Not available).


 **13. Channel List** - Shows list of all channels/channel genres.


 **14. - 3Hrs Details** - Displays 3 hours previous program details (Available in the Guide).

 **15. Guide (EPG)** - Shows 24 Hours hour-by-hour details of each channels programs.

 **16. +3Hrs Details** - Displays 3 hours' ahead program details (Available in the Guide).

 **17. Number Keys** - Takes you directly to the Channels you want to watch.

 **18. Previous Category** - Available in the Guide, Shows list of previous category channels.

 **19. Next Category** - Available in the Guide, Shows list of ahead Category channels.

## Now let's get introduced to clear TV's home screen closely.

Once your Clear TV is turned on, you will see a home page having the following icons:

- Channel list
- Live TV
- Favorite
- Catch up TV
- Program Guide
- Video on Demand

### Channel list feature:

You will see a box with list of channels on the left side of the home screen. All available channels are listed on the basis of its category.

Please use the navigation key on the Set-Top Box (STB) remote to select the channel category. Press OK.

You can also view the channel list directly by pressing the "L" button on the remote. If you know the channel number of the channel you want to select, you can directly press the channel code by pressing the number buttons on the remote to directly select the channel you want to watch.

In the channel list, you can use the red button on the remote if you want to view the list of previous channels. Likewise, Green button is to view the list of the channels ahead.

### Favorite feature:

This feature is available on the top right of the home screen.

To select the channels and have them on the Favorite list, please go to channel list on the home screen and select the channels by pressing the yellow button on the remote. By doing this, the channels that you have selected will be placed on the favorite list. Now you can go to the home screen and select the channel you want to watch by directly going to the favorite feature and by selecting the desired channel. Also, you can directly go to your favorite channel list by pressing the "FAV" button on the remote.

### Electronic Program Guide:

Electronic Program Guide (Guide) is one of the key features of Clear TV. This feature provides 24 hour details of all the channels (Depends on the availability of data) which will show the name of the programs along with upcoming programs and its timings and durations. You can also set up a reminder so that you don't miss your favorite program or schedule the recording of that program to watch it later at your convenience.

To use this feature, you can directly go to the home screen and select the Program Guide box located on the right corner of the home-screen. You may also go to this feature by pressing the "Guide" button from remote, while watching any channel.

## Some important features of Clear TV:

### Program reminder:

With this feature, user can set a reminder for the upcoming desired program of a particular channel. By doing this, the STB will remind the user about the selected program which is about to come and redirects the user to that particular channel to view the desired program so that it is not missed.

To activate the reminder for a particular program, Please navigate to EPG (The instructions to navigate to EPG has been illustrated on the "Electronic Program Guide" section) and select the channel. With the help of the navigation key select the upcoming program for which you would like to set the reminder for and press "i" button on the remote. You will see a notification box where program short description is displayed along with Add Reminder, Add Recorder and Ok Option. Please select "Add Reminder" and OK Option with the help of remote. Immediately after pressing OK on the remote, a message "New reminder has been created" will appear on the bottom of the screen. Again Press "OK" option and you are good to go. Please note that users can only set reminder on future programs and not for the past programs.

### Mini Guide:

Channel & Program Details: Channel & Program details are shown whenever you select the channel. You can also press OK while viewing a program to see the channel details at the bottom of the screen as a mini guide. You can also navigate to future programs through this mini guide.

### To search/ update added channels:

NIT

When the above symbol appears in the mini guide, please reboot (Off/ON) the Set-Top Box (STB) to receive upgraded channels automatically.

### Catch up TV Feature:

Currently not available, will available soon

### Video on Demand:

Currently not available, will available soon

### Record a program:

Currently not available, will available soon

### Volume Leveling:

Volume Leveling is another unique feature of Clear TV service. This feature enables you to store the volume to your desired level for each channel.

You can simply set the individual channel's volume from the Clear TV Set- Top Box Remote.

We hope this instructional manual will be helpful for you.

Thank you.